


## LOADING SCHEDULE 8KCAB (180 HP/CS PROP)

PAGE 4 OF 9  
REVISION: A  
DATE: 10-23-03

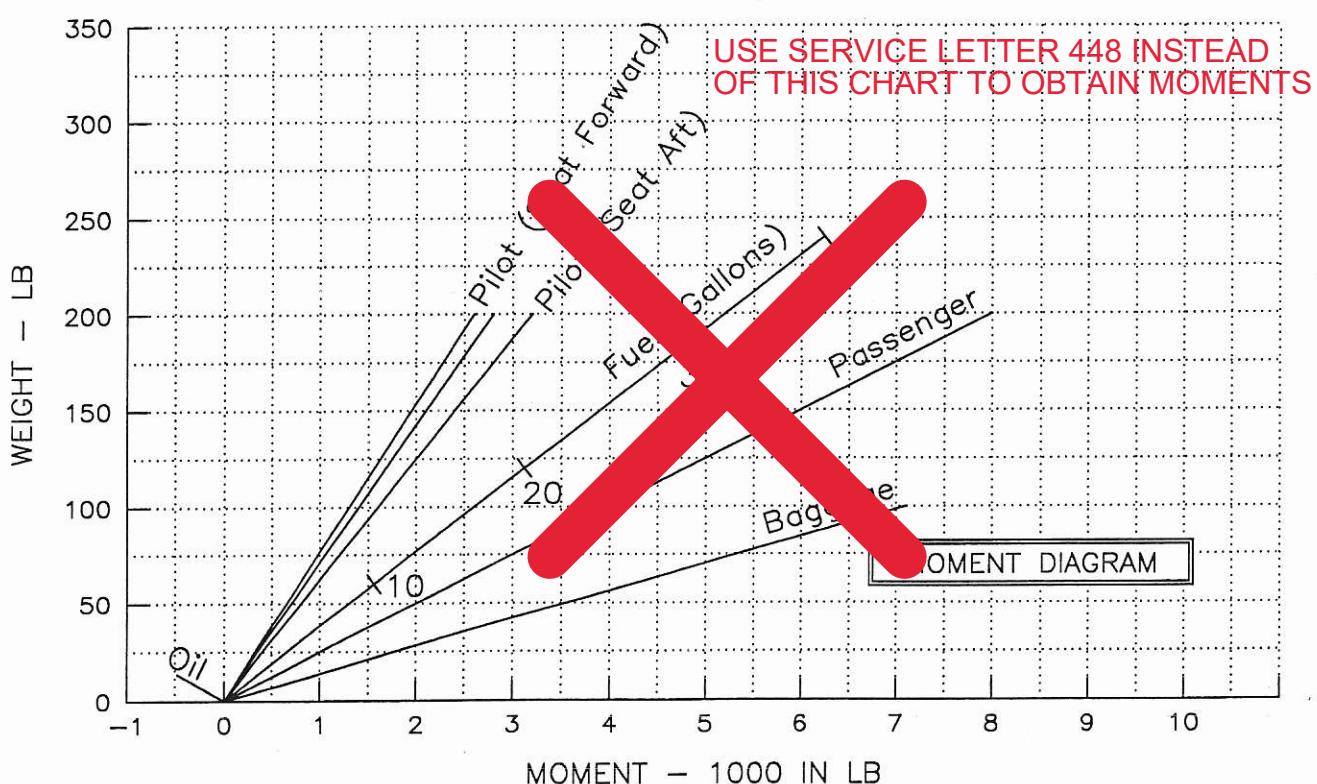

Add weights and moments of items in MOMENT DIAGRAM to airplane empty weight and moment. (negative oil moment) Locate intersection of total weight and moment on AIRPLANE LOADING ENVELOPE. Any point within the envelope meets all balance requirements.

